



Applicable Models

User Manual

UNIV-14.3kWh()

UNIV-16kWh()

This manual introduces the product UNIV-14.3kWh(I) / UNIV-16kWh(I). These two type is an energy storage system composed of lithium iron phosphate batteries. Please read this manual before installing the battery and strictly follow the instructions during the installation process. If you have any questions, please contact the distributor for advice and clarification.

Contents

About this document.....	2
1. Safety.....	3
2. Introduction.....	5
2.1 Features.....	5
3. Battery Pack Introduction.....	6
3.1 Battery Pack Specification.....	6
3.2 Battery Pack Introduction.....	7
3.2.1 Battery Pack Appearance.....	7
3.2.2 Battery Screen Introduction.....	8
3.3 Communication Instructions.....	11
3.3.1 Communication With Inverter.....	11
3.3.2 Communication Between The Battery Packs.....	11
4 Installation And Configuration.....	12
4.1 Installation Recommendations.....	12
4.2 Equipment Installation.....	15
4.2.1 Installation Preparation.....	15
4.2.2 Connection With Inverter.....	16
5 Battery Monitor software.....	17
6. Bluetooth APP.....	19

About this document

This manual describes the product information, installation, electrical connection, commissioning. Read through this manual before installing and operating the product. All the installers and users have to be familiar with the product features, functions, and safety precautions. This manual is subject to update without notice. For more product details and latest documents, Please consult the supplier.

Revision History

Revision No.	Revision Date	Revision Reason
A0	2025-02-12	First Published
A1	2025-06-05	Structural change of the battery enclosure

Symbol Definition

 DANGER
Indicates a high-level hazard that, if not avoided, will result in death or serious injury.
 WARNING
Indicates a medium-level hazard that, if not avoided, could result in death or serious injury.
 CAUTION
Indicates a low-level hazard that, if not avoided, could result in minor or moderate injury.

1. Safety



WARNING

Please read all safety instructions carefully before performing any work and strictly follow them while handling the battery.

Only qualified persons are allowed to wire the batteries.

Failure to comply may result in:

- Serious injury or fatality to the operator or others.
- Damage to system components, equipment, or third-party property.

Required Qualifications for Personnel:

Personnel must possess the following qualifications to perform installation, commissioning, and maintenance:

- Training in electrical system installation and hazard management.
- Familiarity with this manual and other relevant documentation.
- Knowledge of local regulations and applicable directives.



CAUTION

Please read carefully to ensure error-free operation of your battery.

Wrong step may cause battery system failure or life cycle reduction.

Before Connecting

- Before installation, ensure that the grid power is disconnected and the battery is turned off. Properly connect the positive and negative cables to avoid reversal, and confirm there are no short circuits in external devices.
- All the battery pack terminals must be disconnected before any maintenance.
- Do not use cleaning solvents to clean battery pack.
- Do not expose battery to flammable or harsh chemicals or vapors.
- Do not connect battery pack with AC/PV solar wiring directly.
- Do not insert any foreign object into any part of the battery pack.
- Keep the battery away from water and fire.
- The battery system must be correctly grounded.

When using

- If the battery system requires relocation or repair, ensure that the power is disconnected and the battery is turned off.
- Do not connect different types of batteries.
- Do not connect the battery to incompatible or malfunctioning inverters. If you insist on using the battery without communication, we will shorten the warranty period in accordance with the warranty agreement.
- Do not touch the battery pack with wet hands.
- Do not crush, drop or puncture the battery pack.
- Always dispose of the battery pack according to local safety regulations.
- Store and recharge the battery pack in a manner in accordance with this user manual.
- Do not reverse the polarity when installing.
- Do not short circuit the terminals, remove all jewelry items that could cause a short circuit before installation and handling.
- The battery packs should be not stacked more than specified numbers.
- Continued operation of a damaged battery pack can result in dangerous situation.

Special Reminder

- If the battery pack is stored for a long time, it is required to charge them every six months, and the SOC should be no less than 90%.
- Battery needs to be recharged within 12 hours, after fully discharged.
- If the battery is not fully charged and discharged over a long period, the SOC may become inaccurate. Please perform a full charge calibration at least once every two weeks.
- If you encounter any battery issues, do not attempt to open the battery for inspection or repair by yourself. In case of problems, please immediately contact distributor for assistance. Any disassembly of the battery must be done under the supervision of after-sales personnel to prevent accidents.
- Don't conduct any dangerous tests by yourself. All testing must be performed under the supervision of distributor technical to avoid serious accidents.

- Battery startup sequence:
 1. Connect external wiring properly.
 2. Turn on the circuit breaker to begin usage.
 3. Press the switch button and wait for the battery to power on normally.
- Battery turn off sequence:
 1. Turn off the circuit breaker.
 2. Press the switch button and wait for the battery to power off.
 3. Disconnect external wiring properly.

2. Introduction

The UNIV-14.3kWh(I) / UNIV-16kWh(I) series battery is a low-voltage energy storage system based on lithium iron phosphate (LiFePO₄) batteries. It is one of the new energy storage products.

This system provides reliable power support for various equipment and systems, especially in applications requiring high power, large capacity, limited installation space, and long cycle life.

2.1 Features

- ◆ High Scalability: Supports max of 20 batteries in parallel.
- ◆ Environmentally Friendly: The entire module is non-toxic, non-polluting, and eco-friendly.
- ◆ High Safety & Long Cycle Life: Uses LiFePO₄ as the cathode material for enhanced safety and longevity.
- ◆ Intelligent Battery Management System (BMS): Provides protection against over-discharge, over-charge, over-current, and high/low temperature.
- ◆ Flexible Configuration: Multiple battery can be connected in parallel to expand the capacity.
- ◆ Exceptional safety performance: Equipped with secondary protection featuring trip (disconnection) functionality, and optional aerosol configuration for enhanced safety.
- ◆ Wide Operating Temperature Range: Functions efficiently with a charging temperature range of 0°C to +55°C and a discharging temperature range of -20°C to +55°C, ensuring excellent performance and longevity.


3. Battery Pack Introduction

3.1 Battery Pack Specification

MODEL		UNIV-14.3kWh	UNIV-16kWh
BATTERY PARAMETERS			
Total Energy (kWh)		14.34	16.08
Usable Energy (kWh)		13.48	15.11
Nominal Voltage (Vd.c)		51.2	51.2
Voltage Range (Vd.c)		44.8 ~ 57.6	44.8 ~ 57.6
Rated Capacity (Ah)		280	314
Normal Current(A)	Charge	140	157
	Discharge	140	157
Dimension(W *H* D) (mm)		525*720*245	525*720*245
Weight (KG)		111	117
BMS Features		Over-voltage Protection/Over-current Protection Short-circuit Protection/Temperature Protection Low-voltage Protection/ Cell Balance	
Model		I	
Standard Features		Button-Controlled Screen/ Trip Protection/Bluetooth	
Communication		CAN/RS485	
Charge Temperature		0℃ ~ 55℃ (32°F ~ 131°F)	
Discharge Temperature		-20℃ ~ 55℃ (-4°F ~ 131°F)	
Storage Temperature		-20℃ ~ 55℃ (-4°F ~ 131°F)	
IP Rating		IP20	
Cooling Type		Natural	
Operating Environment		Indoor (5% ~ 95%(RH) No Condensing)	
Altitude		≤2000 m	
Warranty		5+5 Years	
Operation Life		15+ Years (25℃/77 °F)	
Certification		CE/Cell UL 1973/UN38.3/MSDS/IEC62619	

3.2 Battery Pack Introduction

3.2.1 Battery Pack Appearance

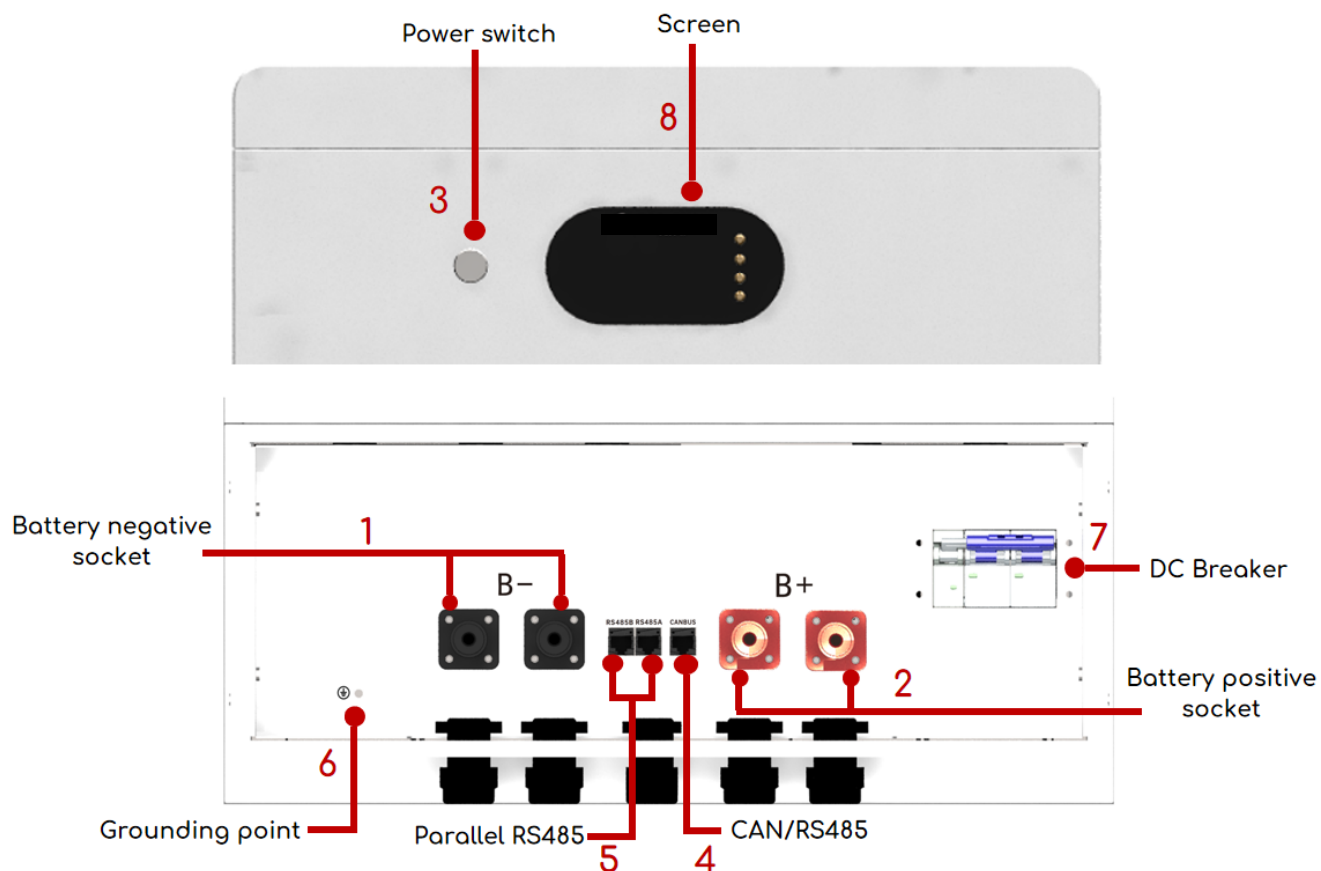


Item	Name	Function Description
1	Battery negative socket	Connect with battery negative terminal
2	Battery positive socket	Connect with battery positive terminal
3	Power switch	Switch the battery on or off
4	CAN/RS485	Communicate with the inverter
5	Parallel RS485	Parallel communication with other battery
6	Grounding point	Reserved baseline interface
7	DC breaker	The master switch of the battery system
8	Screen	Check information of battery

3.2.2 Battery Screen Introduction

3.2.2.1 Home Screen



After powering on and activation, the battery management interface will be displayed. Press the ENTER key to enter the homepage.

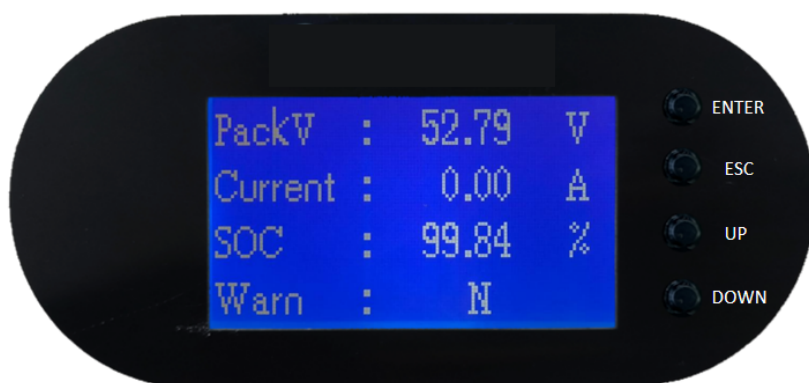

PackV: Total battery voltage

Current: Real-time Current

SOC: The remaining capacity

Warn: Alert

3.2.2.2 Battery parameter interface

Press the UP key to enter the detailed battery parameter information.



Press the UP and DOWN keys to scroll and select the parameter you want to view. Use the ENTER key to confirm, and the ESC key to exit.

CellV Parameters



You can view the voltage of all individual battery cells.

Temperature Parameters



You can view the temperature information of all temperature monitoring points, as well as the Power temperature (PCB-temp) and Ambient temperature (Envir-temp).

SOC



FCC: Battery capacity


Rm: The remaining capacity

Cycle Time: Cycles

CAN: CAN protocol

You can enter this interface to view information such as battery capacity.

Warn

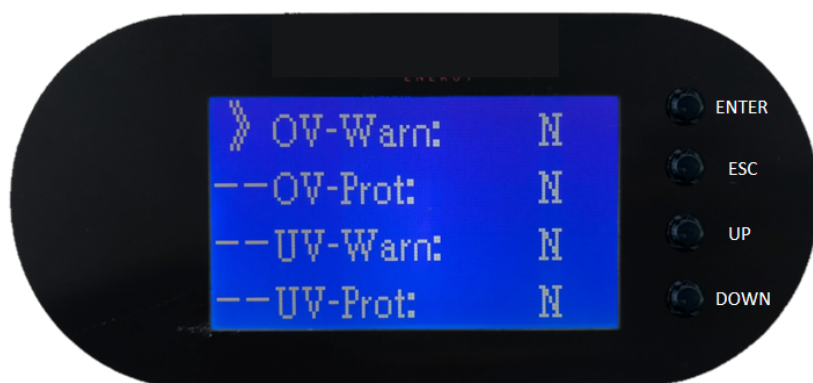

OV-Warn: High-voltage warning

UV-Warn: Low-voltage warning

OT-Warn: High temperature warning

UT-Warn: Low temperature warning

OC-Warn: Over current warning

CAPA-Warn: Remaining capacity alarm

SCP: Short circuit protection

OV-Prot: Over voltage protection

UV-Prot: Under voltage protection

OT-Prot: Over temperature protection

UT-Prot: Under temperature protection


OC-Prot: Over current protection

OFF-USE: Failure warning

You can enter this interface to identify the cause of the fault.

3.2.2.3 Protocol switching interface

Press the DOWN key to enter the protocol switching interface. After selecting the corresponding protocol, press and hold the ENTER key for 3 seconds. When "SUCCESS" appears, the switch is complete.

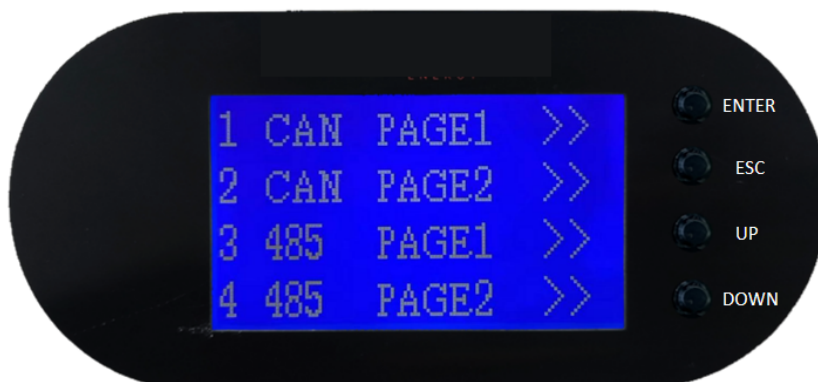

CAN PAGE1:

PNGDLT: Pylon

GRWT: Growatt

VCTR: Victron

SMASF: SMA

CAN PAGE2:

GINL: Solis

STUD: Studer

The RS485 protocol supports adaptive recognition and switching, so manual switching is not required.

3.3 Communication Instructions

3.3.1 Communication With Inverter



CAUTION

Please read the definition of the Battery Communication interface in the inverter's instruction manual before proceeding with this part of the operation.



If you have problems with this part of the communication, please contact after-sales department.

if you use CAN communication, you need to pay attention to CAN_H and CAN_L in the definition of battery interface.

When the pin definition of communication between the inverter side and the battery side is the same, the communication can be done by using normal network cable.

If the pin definition of communication between inverter and BMS is not the same, you need to make a special cable according to the inverter pin, otherwise the inverter will not recognize the battery.

Interface Definition

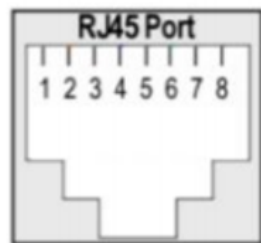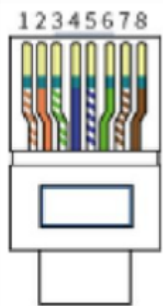

CAN	
Pin	Definition description
1	RS485-B
2	RS485-A
3	NC
4	CAN-H
5	CAN-L
6	NC
7	RS485-A
8	RS485-B

3.3.2 Communication Between The Battery Packs

Communication between batteries can be achieved using the provided standard network cables, with no modifications required.

4 Installation And Configuration

4.1 Installation Recommendations

Environmental Requirements

DANGER

Cleanliness

The battery system features high-voltage connectors, and environmental conditions can affect the system's isolation. Before installation and powering on, ensure that dust and metal debris are removed to maintain system cleanliness. The environment should provide a certain level of dust protection. During ongoing system operation, regularly check for dust and humidity levels.

Fire Protection

The room must be equipped with a fire protection system or fire extinguishers (foam extinguishers are recommended). The fire protection system should be regularly inspected to ensure it is functioning properly. Please follow the local guidelines for the use and maintenance of fire protection equipment.

Grounding Protection

Ensure that the grounding point for the battery system is stable and reliable prior to installation. If the battery system is installed in a standalone equipment cabin (e.g., a container), verify that the grounding of the cabin is stable and reliable. The resistance of the grounding system must be $\leq 100\text{m}\Omega$.

CAUTION

Temperature Considerations

The LV series battery operates within a temperature range of -20°C to $+55^{\circ}\text{C}$, with optimal performance achieved in this range. If the operating temperature exceeds these limits, the system will trigger over-temperature or under-temperature alarms or protection mechanisms. Prolonged operation outside the specified range may shorten the battery's cycle life.

Cooling System







If the temperature does not meet the operating conditions, an external cooling

system, such as central air conditioning, should be provided to ensure the battery system remains within the optimal temperature range. Exceeding the temperature range will trigger over-temperature alarms or protection, which may reduce the service life.

Heating System

If the temperature does not meet the operating conditions, a heating system, such as central heating, should be provided to ensure the battery system stays within the optimal temperature range. If the ambient temperature falls below 0°C, the system may shut down for protection. In this case, the heating system must be activated first. Exceeding the working temperature range will trigger under-temperature alarms or protection, potentially reducing the cycle life of the battery system.










Installation Tools

		
Wrench	Multimeter	Drilling machine
		
Crimping tool	Phillips screwdriver	Wire stripper

Protective equipment

	
Insulated gloves	Safety shoes

Battery Accessories List

Item	Specification	Quantity	Appearance
Battery	UNIV-14.3kWh(I)/ UNIV-16kWh(I)	1	
Power Cable (Optional)	Connect with inverter(1M)	2	
	Parallel Cable (1M)	2	
Copper Lug (Optional)	SC50-8	4	
Network Cable (Optional)	Connect with inverter(1.5M)	1	
	Parallel Cable (1M)	1	
RJ45 Plug	RJ45 Plug	4	
Manual	Manual	1	
Copper Lug	OT4-5	2	
Quality Inspection Report	Report	1	
Warranty Card	Warranty Card	1	
RS485 to usb(Optional)	RS485 to usb	1	

Preparation Before Installation

Site Assessment:

Ensure the installation site is dry, clean, and free from dust. The area should be free from direct sunlight and excessive humidity to protect the equipment.

Unpacking:

Before unpacking, check the shipping list to confirm the total number of packages. Inspect each package for any visible damage.

Equipment Inspection:

Once unpacked, verify that all items are intact and match the packing list. If there is any damage to the packaging, document and inspect the goods thoroughly.

Handling:

Handle all equipment with care, paying particular attention to avoid damaging the surface

4.2 Equipment Installation

4.2.1 Installation Preparation



WARNING

1. Batteries stored for a period of time may experience some capacity degradation. Mixing these batteries with newly manufactured ones may result in capacity loss.
2. Batteries from different production batches may have slight capacity differences. Mixing batteries from different batches may cause capacity loss.
3. Do not mix batteries of different models without proper authorization.

If any of the above unavoidable situations occur, please contact after-sales service personnel or an authorized distributor.


1. Check whether all battery accessories are complete
2. Ensure that the environment meets all the technical specifications.
3. Make sure the installation project adheres to the guidelines outlined in section 4.2.1 Caution.
4. Prepare the necessary equipment and tools for installation.
5. Verify that the DC breaker is in the OFF position.

4.2.2 Connection With Inverter



CAUTION

Please double-check if the inverter you are using is listed in the compatibility list. If it is not, the entire battery system will not operate properly. If there is a compatibility issue, please contact after-sales personnel or distributor immediately. we will assist you in resolving the issue promptly.

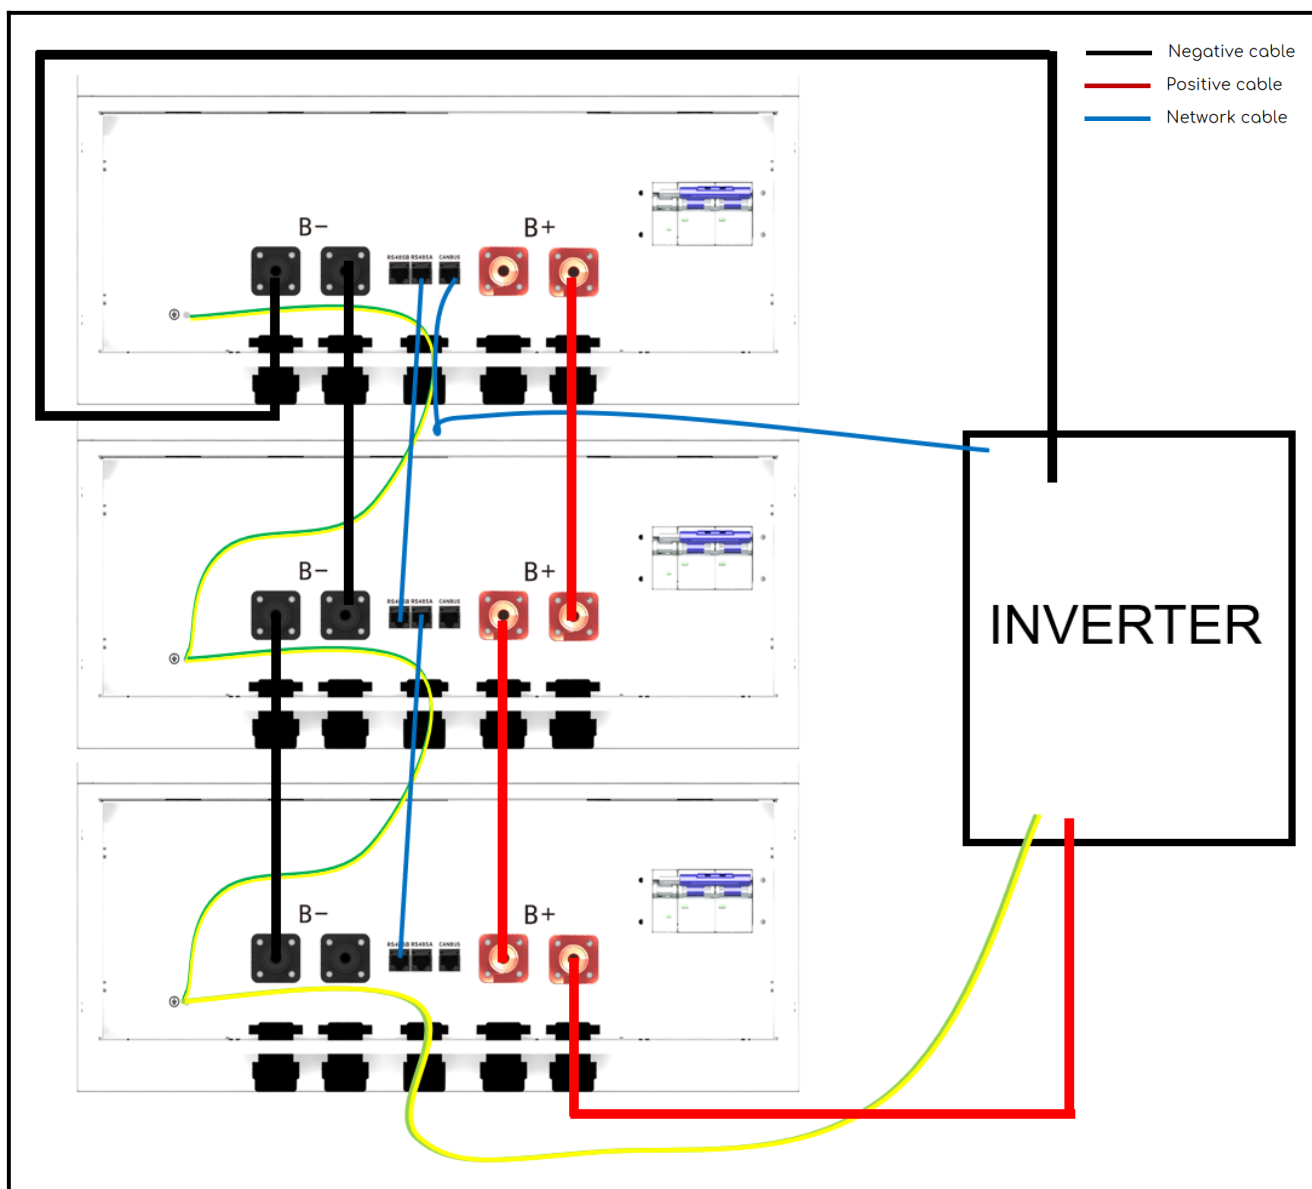

5 Battery Monitor software

You can get the battery monitor software from after-sales department.


Low Voltage RS485 To USB Production

Please refer to the following images to properly connect the Low-Voltage RS485 to USB, provided by Supplier, to the computer and battery.

(The driver required for the Can Box should be obtained from Distributors.)


Use the Ethernet cable provided by the RS485 to USB for the setup:

- Connect the first pin of the Ethernet cable to the second port of the RS485
- Connect the second pin of the Ethernet cable to the first port of the RS485

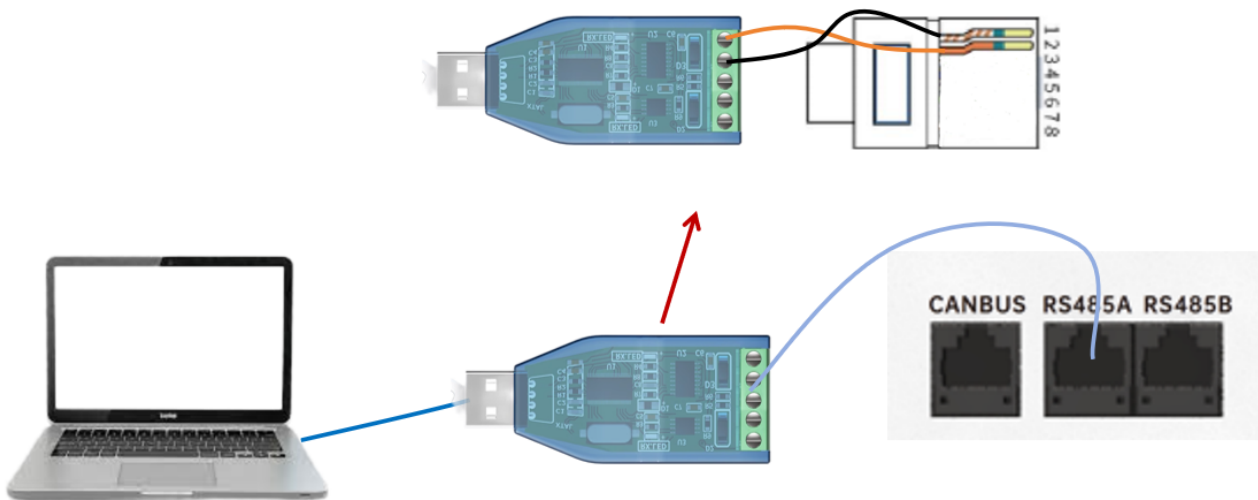

Software Usage Guide

1. Insert the RS485 cable into the battery's RS485A port(When the batteries are connected in parallel, connect to the RS485B port of the master unit.), then connect it to the computer.
2. After installing the driver, open the Battery Monitor System software (for first-time use, you can contact the supplier for technical support).
3. Click "Import Protocol", then go to the "agreement" folder in the software directory and open 16S_V20_ADDR_EN.xml (If you need to use another language, go to the "Other language" folder.CS: Czech, DE: German, PL: Polish, PT: Portuguese, IT: Italian, FR: French)
4. Select the baud rate 19200, click "Connect", and you're ready to use the system.

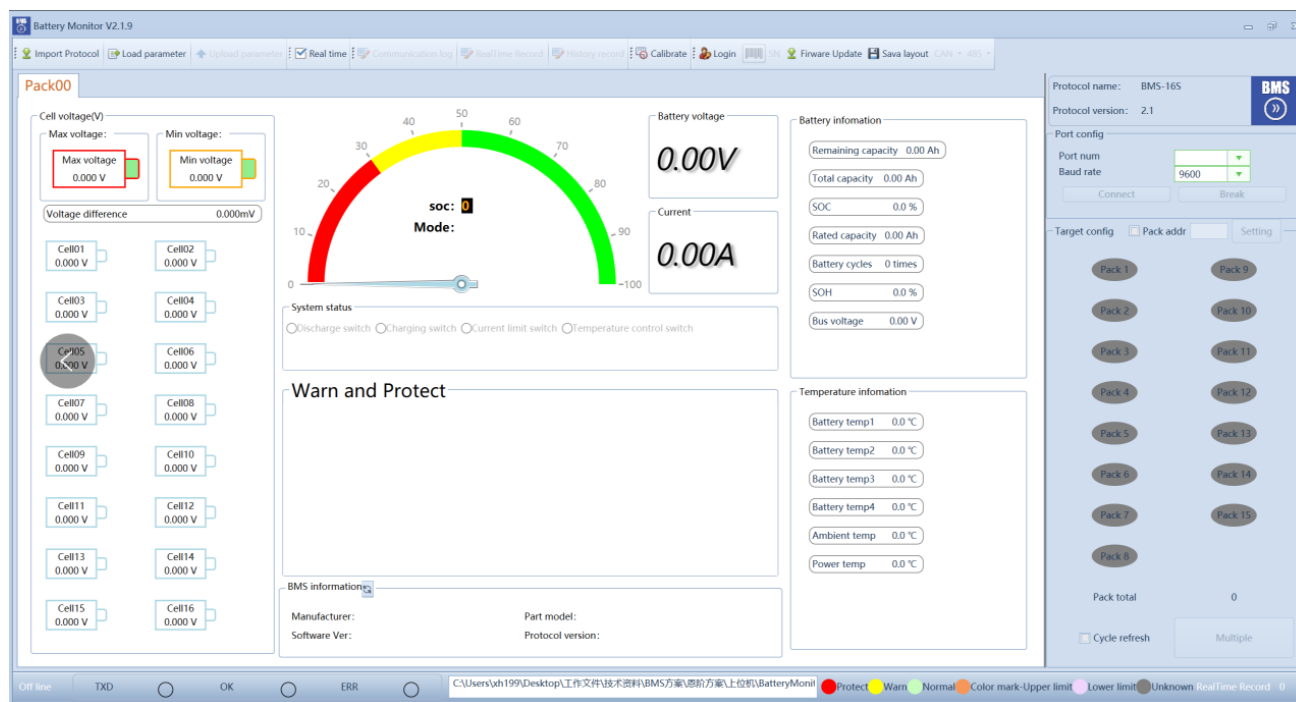

If you encounter any issues while using this software, please contact after-sales personnel or a recommended distributor. We will provide technical support.

6. Bluetooth APP

You can get the battery monitor software from after-sales department or authorized distributor.

App Download Instructions

Method 1: Scan the QR code below the text to download and install.

Method 2: Search for "EN BMS" in Google Play to download the app.


Method 3: Search for "EN BMS" in APP Store to download the app.



EN BMS
WangJin

App Usage Instructions

1. Turn on your phone's Bluetooth and ensure the battery is powered on properly.
2. Tap to open the app and enter the login interface.
3. Username: admin Password: 111111 Click the Login button to enter the app.
4. Click Rescan Device, and once the device appears, tap on it to the parameters.

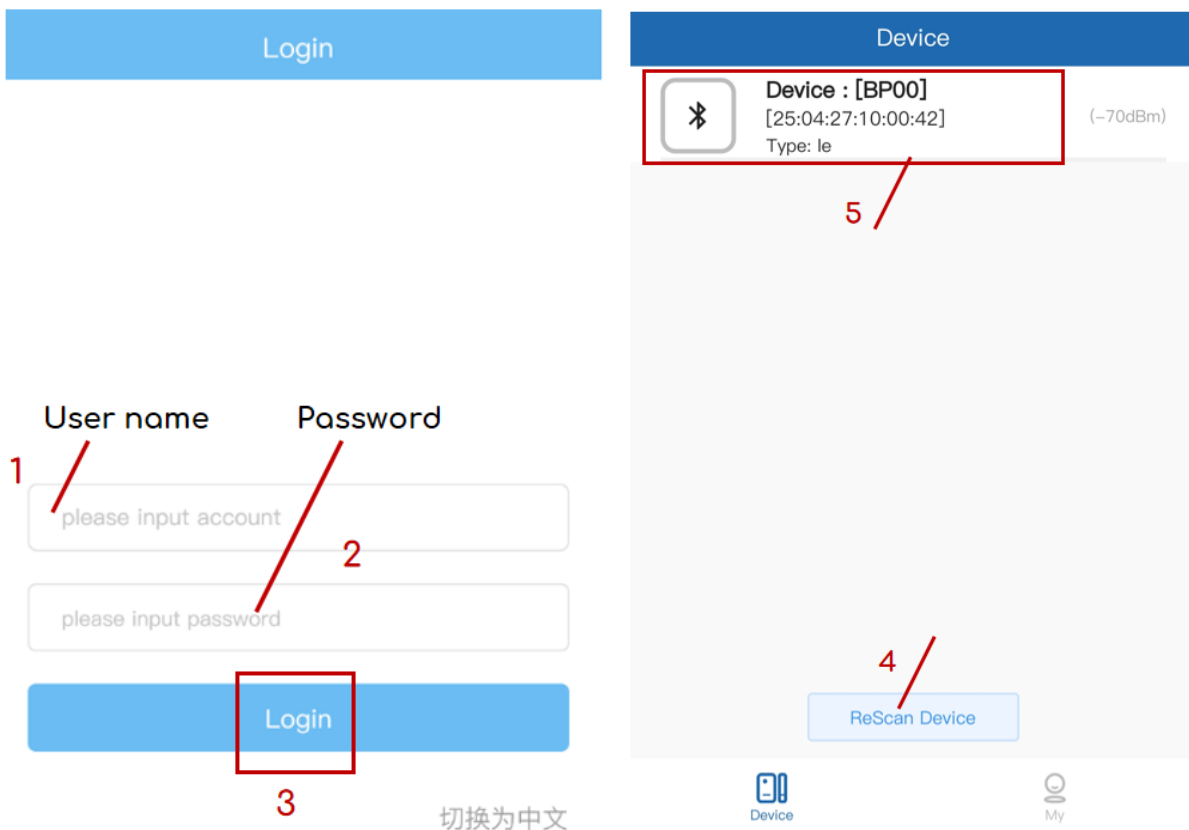

5.You can view detailed information about the battery here.

The screenshot shows the BP00 battery status screen. It includes a top status bar with a back arrow and 'BP00'. Below this is a section with 'Number Of Strings: 16', 'SOC: 39.9%', '52.79V', '0.00A', and 'Remaining Capacity: 79.90Ah'. A 'Standby' status is shown below. There are two buttons: 'Alarm: 0 Alarm Info' and 'Protection: 0 ...'. Below these are two tables of battery information. The first table shows 'Battery Type: LFP', 'Rated Capacity: 200.0Ah', 'Battery Capacity: 200.00Ah', 'Port Voltage: 52.79V', 'Number Of Cycles: 1', and 'SOH: 100.0%'. The second table shows 'Max Voltage: 3.300V', 'Mini Voltage: 3.299V', 'Max Temperature: 29.0°C', 'Mini Temperature: 28.2°C', and 'Power Temperature: 30.6°C'. At the bottom, there are sections for 'Inverter CAN' (PN_GDLT) and 'Inverter 485' (PN), a 'Single' button, a 'Device Detail' button, and two buttons at the very bottom: 'Set Param' and 'Switch Setting'.

Status Bar 1: Displays stand-alone/parallel operation status and Bluetooth connection status.

Status Bar 2: Displays number of cells strings, SOC, battery voltage, current, remaining capacity, and battery operating status

Status Bar 3: Displays statistics of alarm and protection items. Click to view details. Click on a specific alarm/protection item to view additional information such as the time of occurrence.

Status Bar 4: Displays basic battery information. In stand-alone mode, it shows individual battery details; in parallel mode, it shows aggregated statistics of all batteries.

Status Bar 5: Displays and configures inverter communication protocols. CAN: Supports 6 major options and 10 communication protocols RS485: Supports 5 different RS485 protocols

Status Bar 6: Displays stand-alone/parallel operation status and allows master-slave switching
 Device Details: In stand-alone mode (highlighted), battery pack details can be viewed. Click to view more details
 Parameter Configuration: In stand-alone mode (highlighted), battery pack parameters can be viewed/adjusted. Click to view more details
 Switch Settings: In stand-alone mode (highlighted), the battery pack switches can be configured. Click to view more details

Through the Bluetooth app, you can view data, status, and parameters of a single battery (or multiple batteries after parallel connection), and perform control operations.

If you need to modify any battery parameters or are unsure how to proceed, please contact after-sales support or an authorized distributor for technical assistance.