



UNIV-10kWhFS Battery User Manual



This manual describes the Free-Standing & Wall-Mounted Series battery. Please read this manual before installing the battery module and follow the instructions carefully during assembly.

If you have any questions, please contact your dealer immediately for advice and instructions

Contents

1.	Safety Precautions	3
1.1	Precautions	3
1.2	Warning	3
2.	Introduction	4
2.1	Features	4
2.2	Equipment interface instruction	4
2.2.1	Charge mode	4
2.2.2	Discharge mode	4
2.2.3	Standby Mode	5
2.2.4	Shutdown Mode	5
3.	Battery System Introduction	5
3.1	Battery Appearance Introduction	5
3.2	Battery Specification	5
3.3	Battery Function Introduction	7
3.3.1	BMS Port description	7
3.3.2	Other Port description	8
3.4	Communication Instructions	8
3.4.1	Communication with the inverter/BMS software	8
3.4.2	Communication between the batteries	9
3.4.3	Communication Type RS232	10
3.5	Dialing Instructions	10
3.6	LED Indicator Explanation	11
4.	Installation Instructions	13
4.1	Tools	13
4.2	How to Connect The Wire	14

1. Safety Precautions

This section describes the safety information that must be observed when working with battery packs. To prevent any damages, or personal injury, and to ensure the performance of the battery packs, please read this section carefully and observe the safety precautions at all times.

1.1 Precautions

- It is very important and necessary to read the user manual carefully before installing or using the product.
- Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury or death, and could damage the battery, or potentially rendering it inoperable.
- If the battery pack is stored for long time, it is required to charge them every six months, and the SOC should be no less than 50%.
- Please recharged the battery pack within 12 hours, after fully discharged.
- All the battery pack terminals must be disconnected before any maintenance.
- Do not use cleaning solvents to clean battery pack.
- Do not expose battery pack to flammable or harsh chemicals, or corrosive gases or liquids.
- Do not paint any part of battery pack, include any internal or external components.
- Do not expose the battery pack to direct sunlight for extended periods of time.
- Do not connect battery pack with PV solar wiring directly.
- Do not insert any foreign object into any part of the battery pack.

1.2 Warning

- Do not touch the battery pack with wet hands.
- Do not crush, drop or puncture the battery pack.
- Always dispose of the battery pack according to local safety regulations.
- Store and recharge the battery pack in a manner in accordance with this user manual.
- Ensure reliable grounding.
- Do not reverse the polarity when installing.

- Do not short circuit the terminals, remove all jewelry items that could cause a short circuit before installation and handling.
- Disconnect battery from power or loads, and then power off battery before installation and maintenance.
- The battery packs should be not stacked more than specified numbers.
- Continued operation of a damaged battery pack can result in dangerous situation.

2. Introduction

UNIV-10kWhFS lithium iron battery is the new energy storage products developed and produced by Easyway, it can be used to support reliable high power for various types of equipment and systems.

2.1 Features

- 1) Dual active protection on BMS level.
- 2) Automatic address setting when connect in multi-group.
- 3) Support upgrade battery module from upper controller via RS485 communication.
- 4) Enable 90% depth of discharge, available for the inverter which completely follow Easyway latest protocol to operate.
- 5) The module is non-toxic, non-pollution and environmentally friendly.
- 6) Cathode material is made from LiFePO_4 with safety performance and long cycle life.
- 7) Battery management system (BMS) has protection functions including over-discharge, over-charge, over-current and high/low temperature.
- 8) Flexible configuration, multiple battery modules can be in parallel for expanding capacity and power.
- 9) Adopted self-cooling mode rapidly reduced system entire noise.

2.2 Equipment interface instruction

2.2.1 Charge mode

When the battery string detects that the charger is connected and the best charging voltage is greater than 0.5V, when the charging current reaches the effective charging current, the charging mode is entered.


2.2.2 Discharge mode



The battery string enters discharge mode when it detects that the load is

MODEL	UNIV-10kWhFS
BATTERY PARAMETERS	
Total Energy (kWh)	10.24
Useable Energy (kWh)	9.6
Nominal Voltage (Vd.c)	51.2
Voltage Range (Vd.c)	44.8 ~ 57.6
Rated Capacity (Ah)	200
Recommend Charge Current (A)	100
Recommend Discharge Current (A)	100


Peak Charge Current (A)	200
Peak Discharge Current (A)	200
Recommend Using DOD	90%
Dimension (W *H* D) (mm)	760*560*145
Weight (KG)	94
BMS Features	Over-voltage Protection Over-current Protection Short-circuit Protection Low-voltage Protection/ Cell Balance Over Temperature Protection
Communication	CAN/RS485
OPERATING CONDITION	
Operate Temperature (Charge)	0℃ ~ 55℃ (32°F ~ 131°F)
Operate Temperature (Discharge)	-20℃ ~ 60℃ (-4°F ~ 140°F)
Storage Temperature	15℃ ~ 35℃ (59°F ~ 95°F)
IP Rating	IP20
Cooling Type	Natural
Operating Environment	Indoor (5% ~ 95%(RH) No Condensing)
Altitude	<4000 m
CERTIFICATION AND SAFETY	
Warranty	10 Years
Operation Life	15+ Years (25℃/77 °F)
Cycle Life	>8000@25℃, 80%DOD
Certification	CE/Cell UL 1973/UN38.3/MSDS

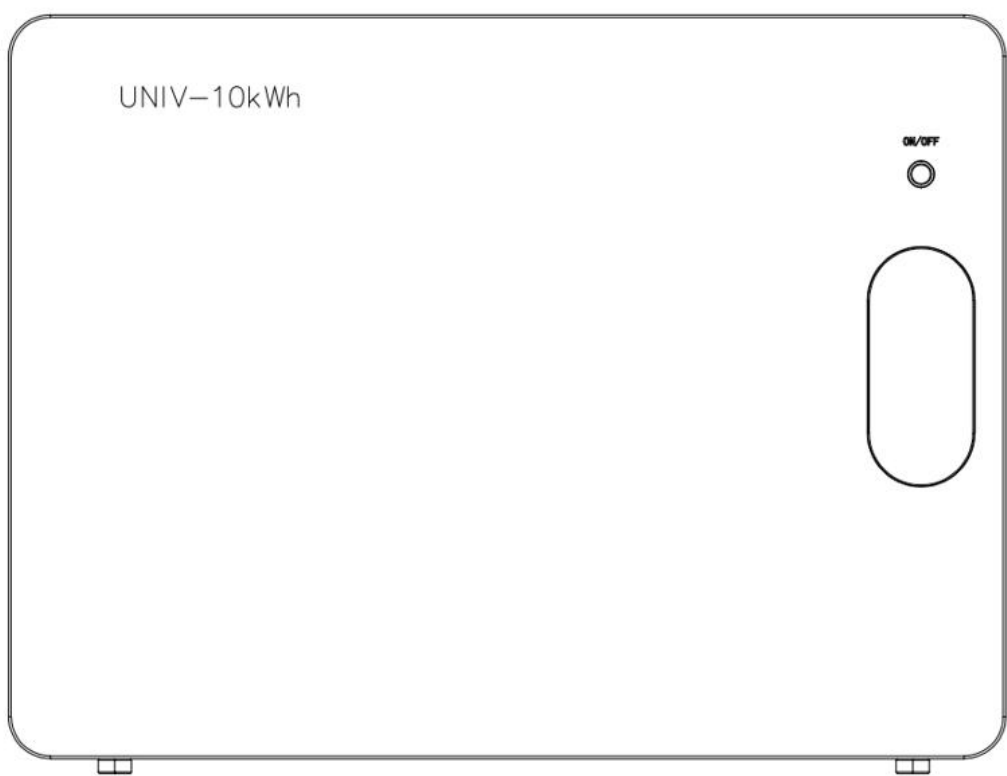
3.3 Battery Function Introduction



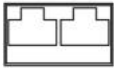

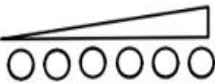





Item	Function Description
	light panel. Display battery level according to SOC
 ON/OFF	Alarm light. If the battery has an alarm, it will emit a red light.

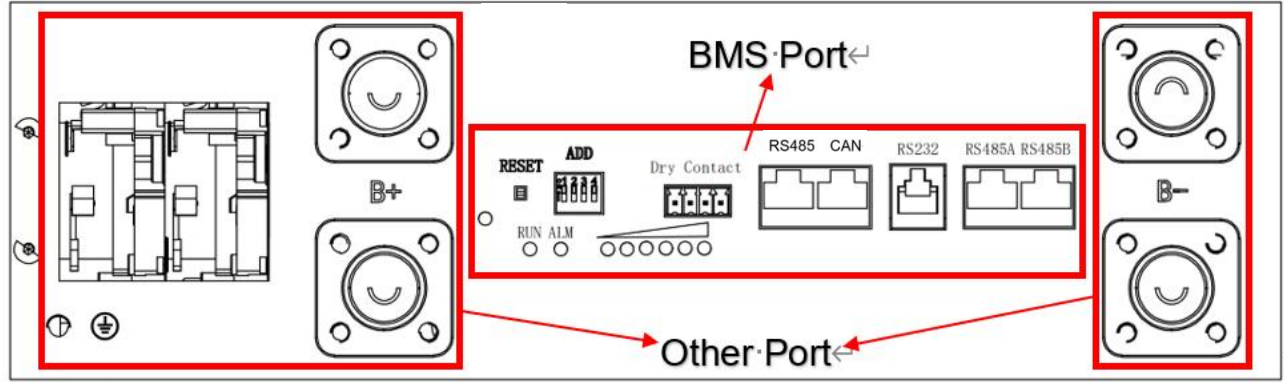


3.3.1 BMS Port description

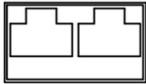

Item	Function Description
	Dip switch: Used for communication when batteries are connected in parallel.

RS485 CAN 	Output communication interface: used for communication with the inverter or BMS software.
RS232 	RS232 interface: used for communication with the battery management system software
RS485A RS485B 	RS485 interface: used for communication between batteries in parallel
RESET 	Reset button: Used to restore factory settings.
	SOC indicator lights: Each light represents a 16.6% capacity range, increasing from left to right.
ALM 	Alarm light: If the battery has an alarm, it will emit a red light.
RUN 	Operation light: When the battery is running normally, it will flash a green light.
	indicator light, used to show whether the battery is turned on.

3.3.2 Other Port description

Item	Function Description
	Output/Input port: Used for battery charging and discharging.
	Circuit breaker: Used to protect the battery in case of excessive current.
	Grounding screw: Used for grounding the product to protect personnel safety.

3.4 Communication Instructions

3.4.1 Communication with the inverter/BMS software

Note: Please read the definition of the Battery Communication interface in the inverter's instruction manual before proceeding with this part of the operation.

If you use RS485 communication, you need to pay attention to RS485-A



and RS485-B in the definition of battery interface, if you use CAN communication, you need to pay attention to CAN_H and CAN_L in the definition of battery interface.

When the pin definition of communication between the inverter side and the battery side is the same, the communication can be done by using normal network cable.

If the pin definition of communication between inverter and BMS is not the same, you need to make a special cable according to the inverter pin, otherwise the inverter will not recognize the battery.


If you have problems with this part of the communication, please contact Easyway's after-sales department or Easyway's authorized dealers.

Interface Definition

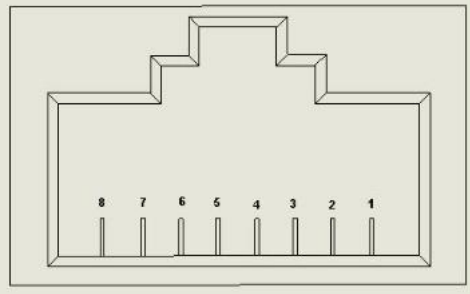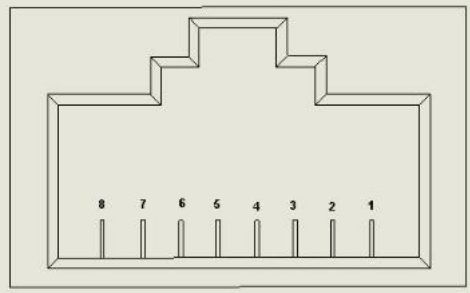	RS485	
	Pin	Definition description
	1/8	RS485-B
	2/7	RS485-A
	3/6	GND
	CAN	
	Pin	Definition description
	1/2/3/6/8	NC
	4	CANH
	5	CANL
	7	GND

3.4.2 Communication between the batteries


Interface Definition

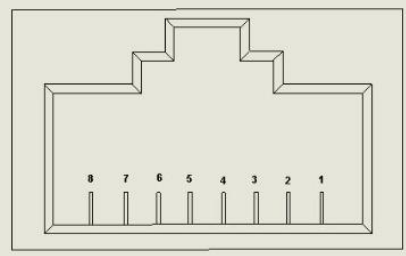	RS485	
	Pin	Definition description
	1/8	RS485-B
	2/7	RS485-A
	3/6	GND
	4/5	NC



Communication between batteries can be done using the network cable included in the battery package.




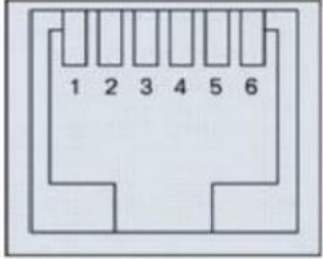




3.4.3 Communication Type RS232

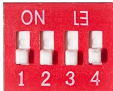


Interface Definition

	RS232	
	Pin	Definition description
	2	NC
	3	TX
	4	RX
	5	GND



3.5 Dialing Instructions

The DIP switch address set to 1 is defined as follows  (a black dot indicates the OFF state, and a blank space indicates the ON state; the same applies to the following) , Address 2 , and other addresses follow the same logic. It is important to note that the DIP switch address on the BMS must match the DIP switch address on the host controller.

Address	DIP switch position				Example Diagram
Parallel quantity	#1	#2	#3	#4	
0	OFF	OFF	OFF	OFF	
1	ON	OFF	OFF	OFF	
2	OFF	ON	OFF	OFF	
3	ON	ON	OFF	OFF	
4	OFF	OFF	ON	OFF	
5	ON	OFF	ON	OFF	
6	OFF	ON	ON	OFF	
7	ON	ON	ON	OFF	

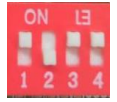8	OFF	OFF	OFF	ON	
9	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

3.6 LED Indicator Explanation

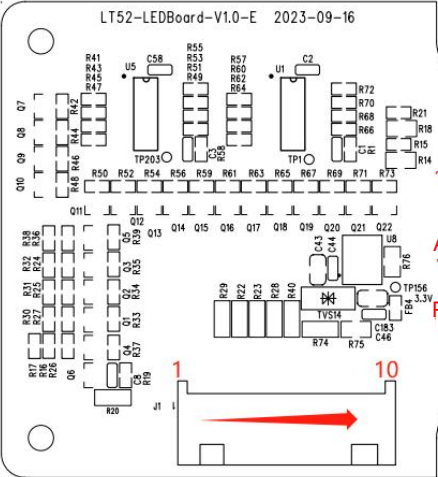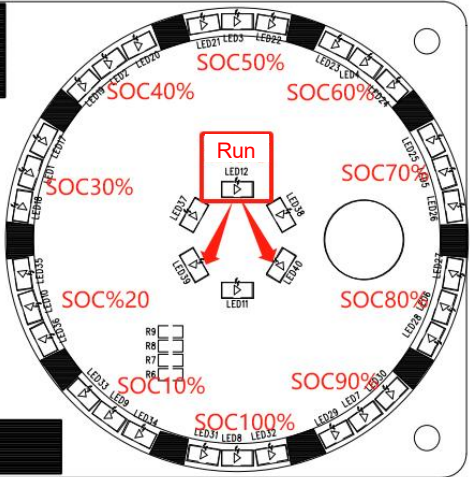








Definition		LED9	LED10	LED11	...	LED8	LED16	LED14	LED13
		●	●	●		●	●	●	●
		10%	20%	30%	...	100%	Run	Alarm	Protect
Status	Behavior								
Shutdown	Sleep	Based on the battery state of SOC					OFF	OFF	OFF

Standby	Normal	Based on the battery state of SOC	ON	OFF	OFF
	SOC Low Alarm		ON	ON	OFF
	Other alarm		ON	OFF	OFF
Charge	Normal	Based on the battery state of SOC (The Highest LED Indicator Flashing)	ON	OFF	OFF
	SOC Low Alarm		ON	ON	OFF
	Other alarm		ON	OFF	OFF
	Overvoltage alarm				
	Overvoltage protection				
	Overcharge Protection		ON	OFF	ON
	Overcurrent protection				
Discharge	Normal	Based on the battery state of SOC (The Highest LED Indicator Flashing)	ON	OFF	OFF
	SOC Low Alarm		ON	ON	OFF
	Other alarm		ON	OFF	OFF
	Overvoltage alarm				
	Overvoltage protection				
	Overcurrent protection				
Temperature Fault	Over-Temperature protection	Based on the battery state of SOC	ON	OFF	ON
	Under-Temperature protection				
	ambient high-temperature protection				
	ambient low-temperature protection				
	MOS over-temperature protection				
Failure fault	reverse polarity protection	Based on the battery state of SOC	OFF	OFF	ON
	cell failure				

4. Installation Instructions

4.1 Tools

 Wire Cutter	 Cable Ties	 Electric Screw Driver
 Screw Driver Set	 Sleeve Piece	 Multimeter

NOTE: Use properly insulated tools to prevent accidental electric shock or short circuits. If insulated tools are not available, cover the entire exposed metal surfaces with available insulated alternatives, except their tips, with electrical tape.

4.2 How to Connect The Wire

