



---

## UNIV7200(W) Battery User Manual

---





This manual describes the Free-Standing & Wall-Mounted Series battery. Please read this manual before installing the battery module and follow the instructions carefully during assembly.

If you have any questions, please contact your dealer immediately for advice and instructions

## Contents

1.	Safety Precautions .....	3
1.1	Precautions .....	3
1.2	Warning .....	4
2.	Introduction .....	4
2.1	Features .....	4
2.2	Equipment interface instruction .....	5
2.2.1	Charge mode .....	5
2.2.2	Discharge mode .....	5
2.2.3	Standby Mode .....	5
2.2.4	Shutdown Mode .....	5
3.	Battery System Introduction .....	5
3.1	Battery Appearance Introduction .....	5
3.2	Battery Specification .....	6
3.3	Battery Function Introduction .....	7
3.3.1	Port description .....	7
3.4	Communication Instructions .....	8
3.4.1	Communication with the inverter .....	8
3.4.2	Communication between the batteries .....	9
3.4.3	Dialing Instructions .....	9
3.5	LED Indicator Explanation .....	9
3.5.1	LED light .....	9
3.5.2	LED Capacity Indication .....	9
4.	Installation Instructions .....	11
4.1	Tools .....	11
4.2	How to wall mount .....	12
4.3	How to connect the Wire .....	13

# 1. Safety Precautions

This section describes the safety information that must be observed when working with battery packs. To prevent any damages, or personal injury, and to ensure the performance of the battery packs, please read this section carefully and observe the safety precautions at all times.

## 1.1 Precautions

- It is very important and necessary to read the user manual carefully before installing or using the product.
- Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury or death, and could damage the battery, or potentially rendering it inoperable.
- If the battery pack is stored for long time, it is required to charge them every six months, and the SOC should be no less than 50%.
- Battery startup sequence:
  - 1.Connect external wiring properly.
  - 2.Press the power button and ensure the battery status is normal.
  - 3.Turn on the circuit breaker to begin usage.
- Battery turn off sequence:
  - 1.Press the power button and confirm the battery is off.
  - 2.Turn off the circuit breaker.
  - 3.Disconnect external cables.
- If the battery is not fully charged and discharged over a long period, the SOC may become inaccurate. Please perform a full charge calibration at least once every two weeks.
- Please recharged the battery pack within 12 hours, after fully discharged.
- All the battery pack terminals must be disconnected before any maintenance.
- Do not use cleaning solvents to clean battery pack.
- Do not expose battery pack to flammable or harsh chemicals, or corrosive gases or liquids.
- Do not paint any part of battery pack, include any internal or external components.
- Do not expose the battery pack to direct sunlight for extended periods of time.
- Do not connect battery pack with PV solar wiring directly.

- Do not insert any foreign object into any part of the battery pack.

## **1.2 Warning**

- Do not touch the battery pack with wet hands.
- Do not crush, drop or puncture the battery pack.
- Always dispose of the battery pack according to local safety regulations.
- Store and recharge the battery pack in a manner in accordance with this user manual.
- Ensure reliable grounding.
- Do not reverse the polarity when installing.
- Do not short circuit the terminals, remove all jewelry items that could cause a short circuit before installation and handling.
- Disconnect battery from power or loads, and then power off battery before installation and maintenance.
- The battery packs should be not stacked more than specified numbers.
- Continued operation of a damaged battery pack can result in dangerous situation.

## **2. Introduction**

UNIV7200(W) lithium iron battery is the new energy storage products developed and produced by Easyway, it can be used to support reliable high power for various types of equipment and systems.

### **2.1 Features**

- 1) Dual active protection on BMS level.
- 2) Automatic address setting when connect in multi-group.
- 3) Support upgrade battery module from upper controller via RS485 communication.
- 4) Enable 90% depth of discharge, available for the inverter which completely follow Easyway latest protocol to operate.
- 5) The module is non-toxic, non-pollution and environmentally friendly.
- 6) Cathode material is made from  $\text{LiFePO}_4$  with safety performance and long cycle life.
- 7) Battery management system (BMS) has protection functions including over-discharge, over-charge, over-current and high/low temperature.

- 8) Flexible configuration, multiple battery modules can be in parallel for expanding capacity and power.
- 9) Adopted self-cooling mode rapidly reduced system entire noise.

## **2.2 Equipment interface instruction**

### **2.2.1 Charge mode**

When the battery string detects that the charger is connected and the best charging voltage is greater than 0.5V, when the charging current reaches the effective charging current, the charging mode is entered.

### **2.2.2 Discharge mode**

The battery string enters discharge mode when it detects that the load is connected and the discharge current reaches the effective discharge current.

### **2.2.3 Standby Mode**

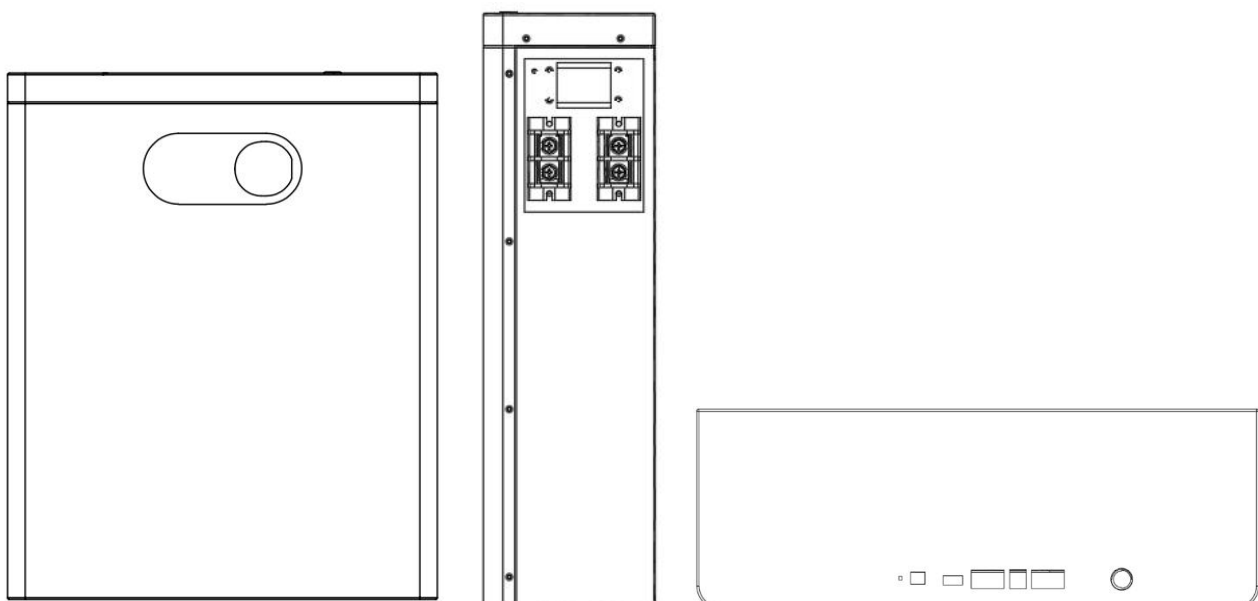
If the above two modes are not satisfied, enter the standby mode.

### **2.2.4 Shutdown Mode**

Normal standby for 48 hours, the battery pack triggers the under voltage protection, execute the switch button or reset button to shut down, Wake-up conditions of shutdown mode: (1) charging activation; (2) 48V voltage

## **3. Battery System Introduction**

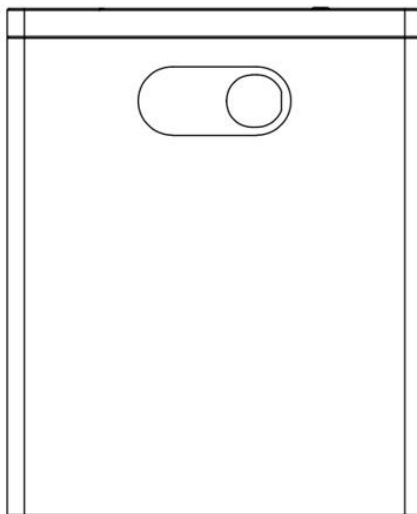
### **3.1 Battery Appearance Introduction**




## 3.2 Battery Specification

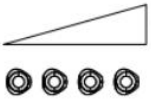



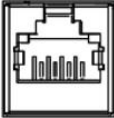
MODEL	UNIV7200(W)
BATTERY PARAMETERS	
Total Energy (kWh)	7.16
Useable Energy (kWh)	6.73
Nominal Voltage (Vd.c)	25.6
Voltage Range (Vd.c)	22.4 ~ 28.8
Rated Capacity (Ah)	280
Recommend Charge Current (A)	140
Recommend Discharge Current (A)	140
Peak Charge Current (A)	200
Peak Discharge Current (A)	200
Recommend Using DOD	90%
Dimension (W *H* D) (mm)	490*610*175
Weight (KG)	58
BMS Features	Over-voltage Protection Over-current Protection Short-circuit Protection Low-voltage Protection/ Cell Balance Over Temperature Protection
Communication	CAN/RS485
OPERATING CONDITION	
Operate Temperature (Charge)	0℃ ~ 55℃ (32°F ~ 131°F)
Operate Temperature (Discharge)	-20℃ ~ 60℃ (-4°F ~ 140°F)
Storage Temperature	-20℃ ~ 50℃ (-4°F ~ 122°F)
IP Rating	IP20
Cooling Type	Natural
Operating Environment	Indoor (5% ~ 95%(RH) No Condensing)
Altitude	<4000 m
CERTIFICATION AND SAFETY	
Warranty	10 Years
Operation Life	15+ Years (25℃/77 °F)
Cycle Life	>8000@25℃, 80%DOD
Certification	CE/Cell UL 1973/UN38.3/MSDS

### 3.3 Battery Function Introduction

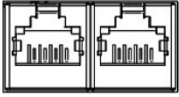





Item	Function Description
	light panel. Display battery level according to SOC

#### 3.3.1 Port description

Item	Function Description
	SOC indicator lights. Each light represents a 25% capacity range, increasing from left to right.
	Alarm light. If the battery has an alarm, it will emit a red light.
	Operation light. When the battery is running normally, it will flash a green light.
	Dip switch. Used for communication when batteries are connected in parallel.
<div>CANBUS</div> 	CAN interface: Built-in with both 485 and CAN protocols, used for communication between the battery and the inverter.



RS485A RS485B 	RS485 interface: Used for parallel communication between batteries.
RESET 	Reset button: Used to restore factory settings.
 ON/OFF	Switch: Control battery activation and deactivation
	Output Terminal: Power is delivered through this point.

## 3.4 Communication Instructions

### 3.4.1 Communication with the inverter

**Note:** Please read the definition of the Battery Communication interface in the inverter's instruction manual before proceeding with this part of the operation.

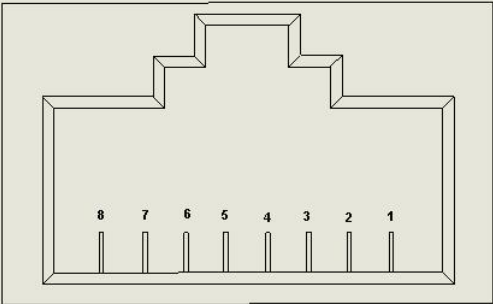
If you use RS485 communication, you need to pay attention to RS485-A and RS485-B in the definition of battery interface, if you use CAN communication, you need to pay attention to CAN\_H and CAN\_L in the definition of battery interface.

When the pin definition of communication between the inverter side and the battery side is the same, the communication can be done by using normal network cable.

If the pin definition of communication between inverter and BMS is not the same, you need to make a special cable according to the inverter pin, otherwise the inverter will not recognize the battery.

If you have problems with this part of the communication, please contact Easyway's after-sales department or Easyway's authorized dealers.

#### Interface Definition

CAN/RS485	
	CAN/RS485
	Pin
	Definition description
	1/8 RS485-B
	2/7 RS485-A
	4 CAN-H
	5 CAN-L
	3/6 GND









<b>D i s c h a r g e</b>	0%~10%	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
	10%~20%	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
	20%~30%	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
	30%~40%	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON
	40%~50%	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
	50%~60%	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON
	60%~70%	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON
	70%~80%	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	ON
	80%~90%	OFF	ON	ON	ON	ON	ON	ON	ON	ON	ON
	90%~100%	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON

Status	Alarm and Protection Status		RUN ○	Alarm ●	Protection ●
Power off	/		OFF	OFF	OFF
	Normal		ON	OFF	OFF
	Voltage Sensor Failure	Secondary trip	OFF	OFF	ON
	Temperature Sensor Failure		OFF	OFF	ON
	Current Sensor Failure		OFF	OFF	ON
	Button Switch Failure		OFF	OFF	ON
	Cell Voltage Difference Failure		OFF	OFF	ON
	Charging Switch Failure		OFF	OFF	ON
	Discharging Switch Failure		OFF	OFF	ON
	Current Limiting Switch Failure		OFF	OFF	ON
	Charge	Single Cell High Voltage Alarm		ON	OFF
Single Cell Low Voltage Alarm		ON	OFF	OFF	
Discharge	Total Voltage High Voltage Alarm		ON	OFF	OFF
	Total Voltage Low Voltage Alarm		ON	OFF	OFF
Standby	Charging High-Temperature Alarm		ON	OFF	OFF
	Charging Low-Temperature Alarm		ON	OFF	OFF
	Discharging High-Temperature Alarm		ON	OFF	OFF
	Discharging Low-Temperature Alarm		ON	OFF	OFF
	Environment High-Temperature Alarm		ON	OFF	OFF
	Environment Low-Temperature Alarm		ON	OFF	OFF
	Power High-Temperature Alarm		ON	OFF	OFF
	Charging Overcurrent Alarm		ON	OFF	OFF
	Discharging Overcurrent Alarm		ON	OFF	OFF
	Remaining Capacity Alarm		ON	ON	OFF

Single Cell Undervoltage Protection	ON	OFF	ON
Total Voltage Overvoltage Protection	ON	OFF	OFF
Total Voltage Undervoltage Protection	ON	OFF	ON
Charging Overvoltage Protection	ON	OFF	ON
Charging Overtemperature Protection	ON	OFF	ON
Charging Undertemperature Protection	ON	OFF	ON
Discharging Overtemperature Protection	ON	OFF	ON
Discharging Undertemperature Protection	ON	OFF	ON
Environment Overtemperature Protection	ON	OFF	ON
Environment Undertemperature Protection	ON	OFF	ON
Power Overtemperature Protection	ON	OFF	ON
Charging Overcurrent Protection	ON	OFF	ON
Discharging Overcurrent Protection	ON	OFF	ON
Transient Overcurrent Protection	ON	OFF	ON
Transient Overcurrent Lockout	ON	OFF	ON
Output Short Circuit Protection	OFF	OFF	ON
Remaining Capacity Protection	ON	OFF	ON
Output Reverse Connection Protection	ON	OFF	ON
Output Short Circuit Lockout	OFF	OFF	ON
Output Connection Fault	OFF	OFF	ON

## 4. Installation Instructions

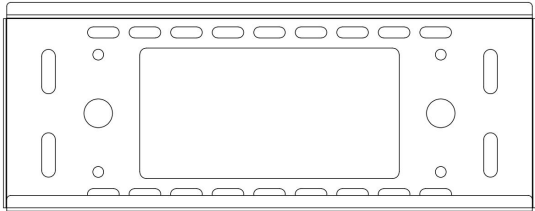
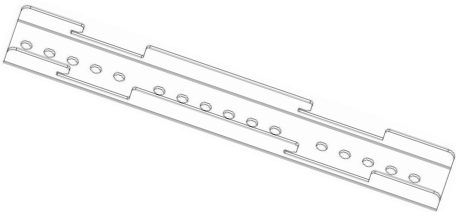
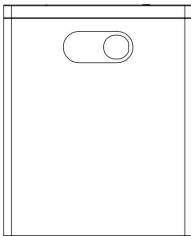
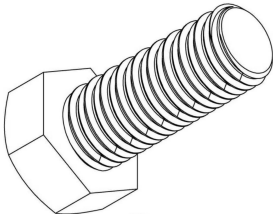
### 4.1 Tools

 <p><b>Wire Cutter</b></p>	 <p><b>Cable Ties</b></p>	 <p><b>Electric Screw Driver</b></p>
 <p><b>Screw Driver Set</b></p>	 <p><b>Sleeve Piece</b></p>	 <p><b>Multimeter</b></p>

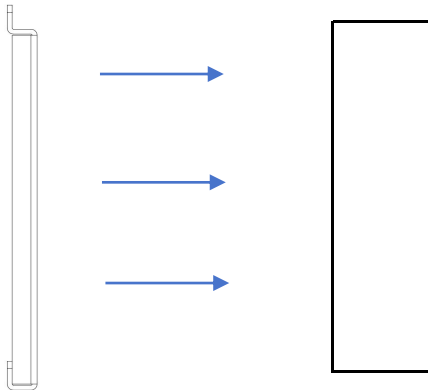
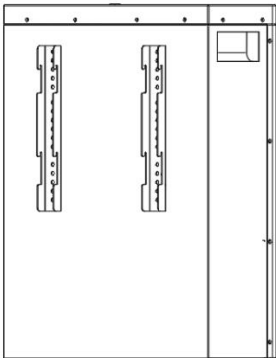
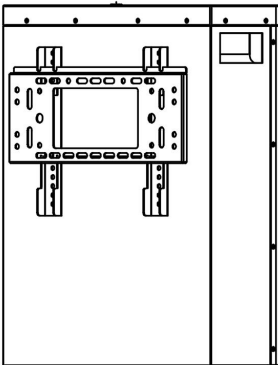
NOTE: Use properly insulated tools to prevent accidental electric shock or short circuits. If insulated tools are not available, cover the entire exposed metal surfaces with available insulated alternatives, except their tips, with electrical tape.

4.2 How to wall mount

Accessories

	
Wall bracket*1	Wall-mounted strip*2
	
Battery*1	Screw*N

Installation steps

1 	2 
3 	

1. Use the provided expansion screws to mount the wall bracket onto the wall.
2. Fix the two wall-mounted strips to the back panel using the provided screws.
3. Hang the battery module onto the wall-mounted rack to complete the installation.

### 4.3 How to connect the Wire

